



USB Interface for OVERLOADER2

Thank you very much for your trust in our products. Please read this instruction manual carefully to avoid mistakes in the usage of the product.

This USB Interface is designed for the OVERLOADER2 to communicate with a Windows based PC and the LogView software. LogView and the required driver for this interface you find on the delivered USB stick. For the latest version of LogView please visit www.logview.info. There you can download the latest versions.



CONNECTION



First connect the USB interface with the delivered USB cable to a free USB port on your PC. You will be prompted to install the driver for the interface. Please use the driver delivered on the USB stick. If the driver is installed correctly the red LED on the interface will light up. You can also install LogView now. Instructions for using LogView the first time you find in your OVERLOADER2 instruction manual.

Please connect the interface to the OVERLOADER2 as on the picture above.

As you can see on the picture the jack for the interface is the right one beside the jack for the temperature probe. If you have it plugged in, the black wire must be on the right side.

SYSTEM REQUIREMENTS

Windows based PC
 one free USB port
 About 20MB free disk space
 Monitor with a resolution of at least 800x600

WARRANTY

Robitronic guarantees this product to be free from defects in materials or workmanship for 90 days from the original date of purchase. This limited warranty does not cover defects which are a result of normal wear, misuse or improper maintenance.

Because we are not able to control the correct installation or operation of this product we can't accept any liability for any damages resulting from using this product. Any operation of this product is at your own risk.

By installing or operating this product the user accepts all resulting liability.